
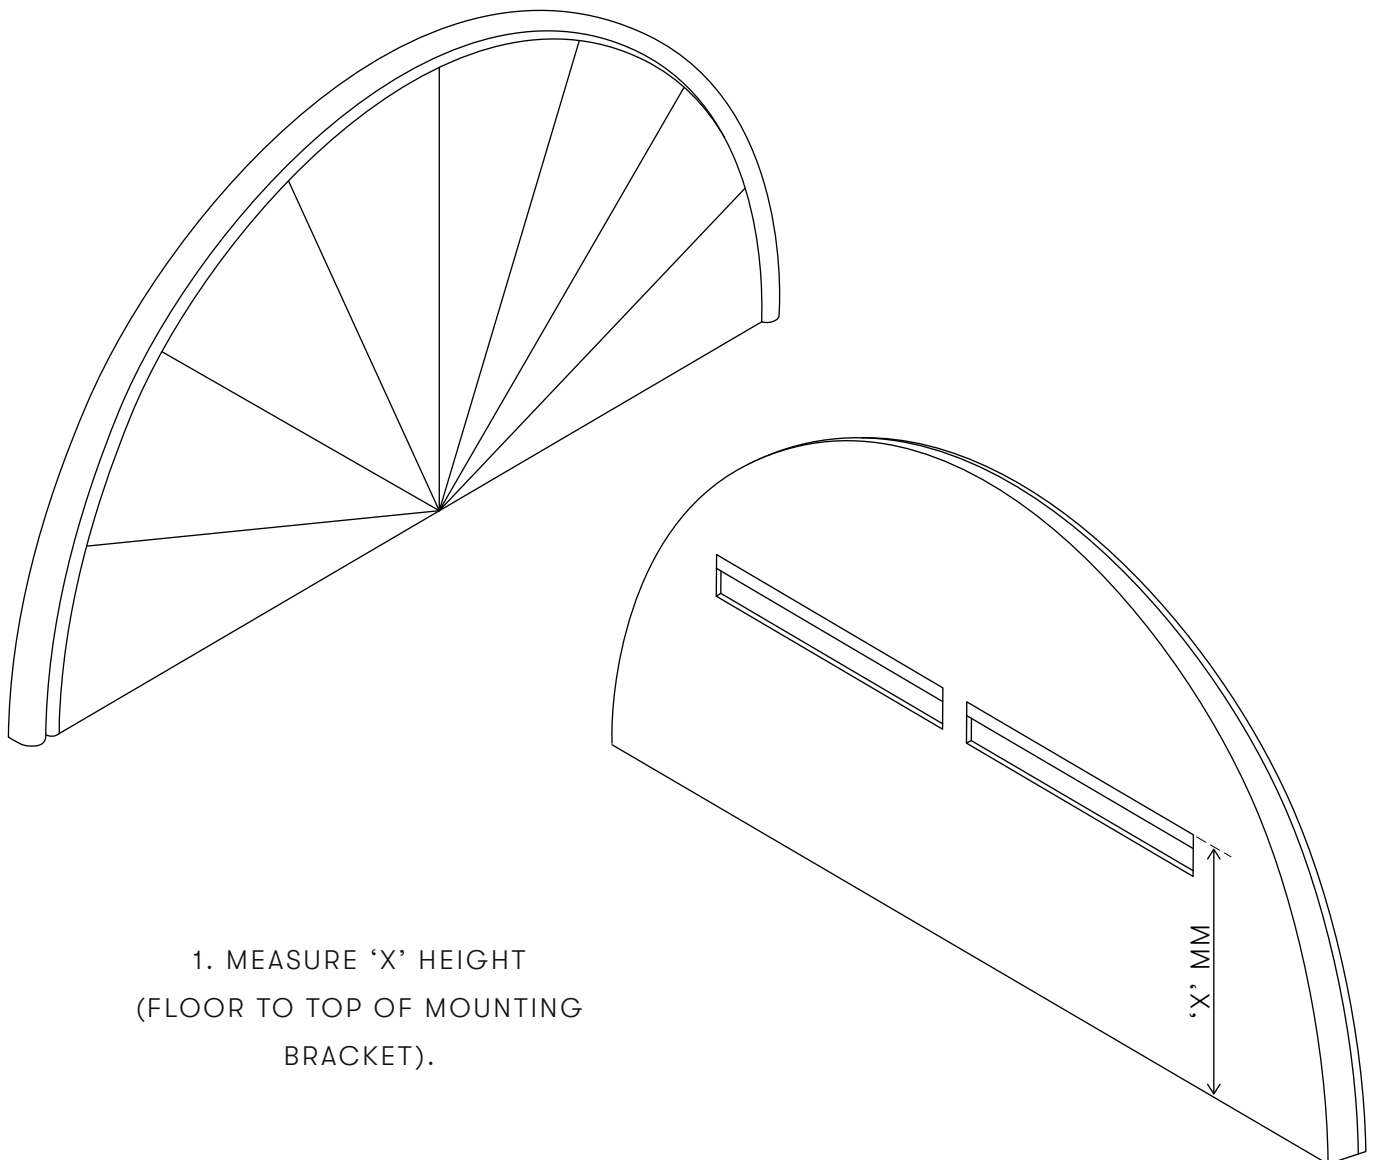
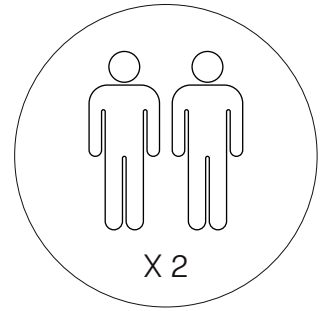
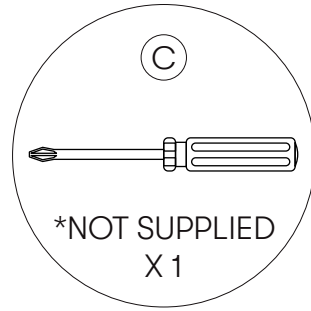
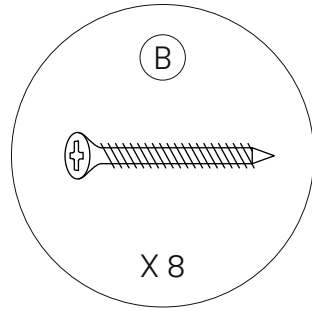



DISCO HEADBOARD ASSEMBLY INSTRUCTIONS

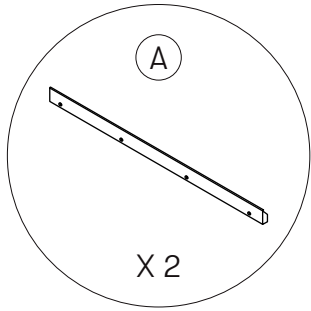

1. MEASURE 'X' HEIGHT
(FLOOR TO TOP OF MOUNTING
BRACKET).

ATTACHING THE WALL BRACKETS

2. PRE-DRILL HOLES ON WALL
SURFACE HEADBOARD IS TO BE MOUNTED
ON MAKING SURE THEY ARE SUITABLE
FOR THE WALL SUBSTRATE.

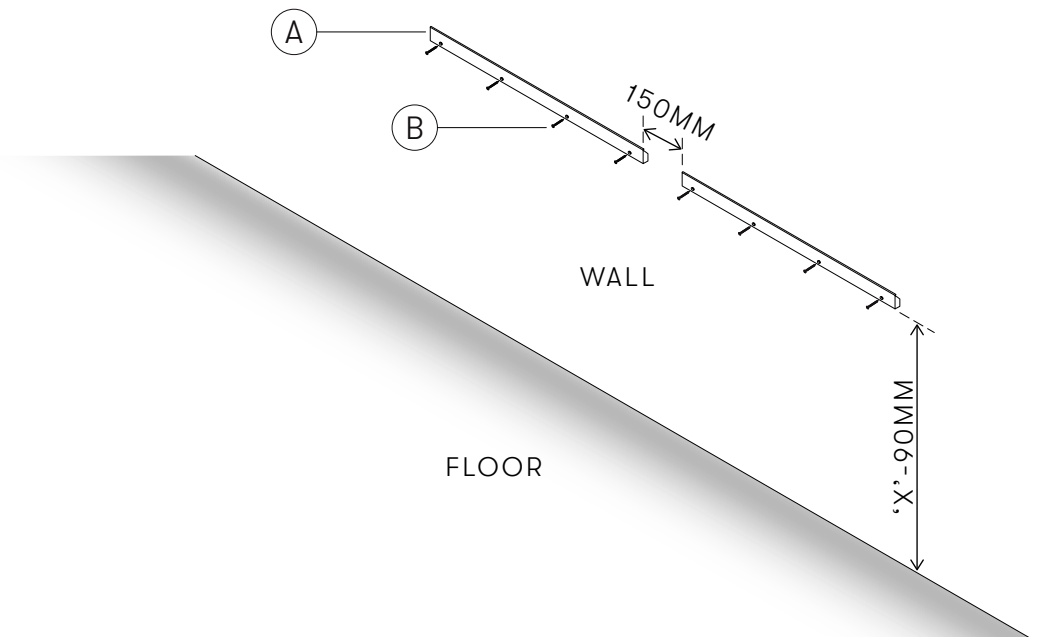

3. TAKE 'X' MEASUREMENT AND SUBTRACT 90MM.

THIS IS WHERE THE BOTTOM OF YOUR
MOUNTING BRACKET SHOULD BE INSTALLED.

4. HANG YOUR HEADBOARD FROM THE INSTALLED BRACKETS.

ENJOY YOUR SUMPTUOUS HEADBOARD AND REWARD YOURSELF WITH A NAP.